

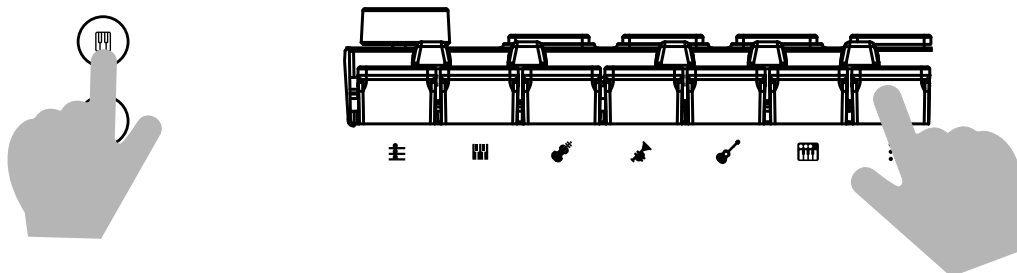



Transposition

 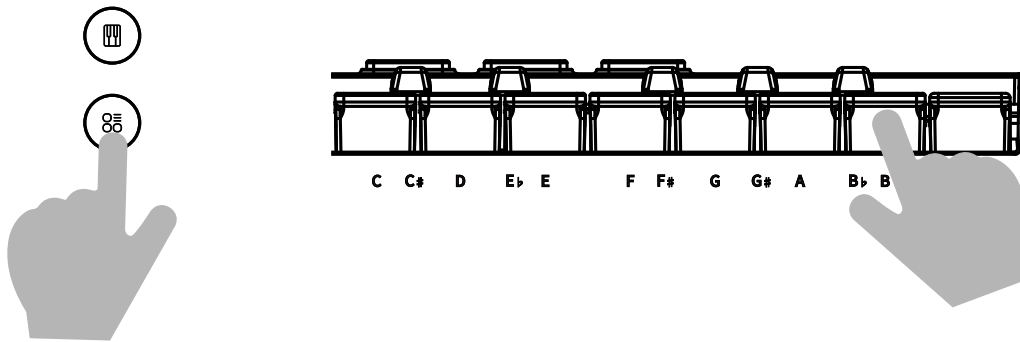


Hold down the  button and press the key that correspond to the desired transposition. The blue LED on the pressed key will indicate a successful transposition.

Changing the Sound (Keyboard)



Hold down the  button and press the keys that correspond to the desired sound icons to change the sound of keyboard.



>> Piano



>> Strings



>> Woodwind & Brass



>> Guitars




>> Synths





>> Others


Chord Touch Bar

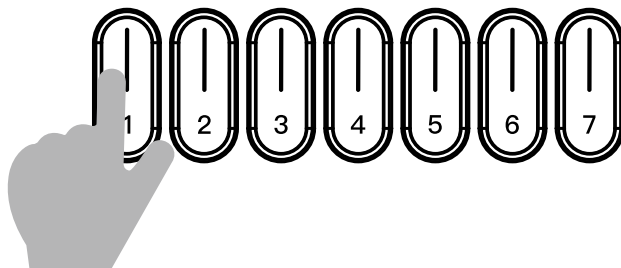
Strumming Mode and Chord Trigger Mode







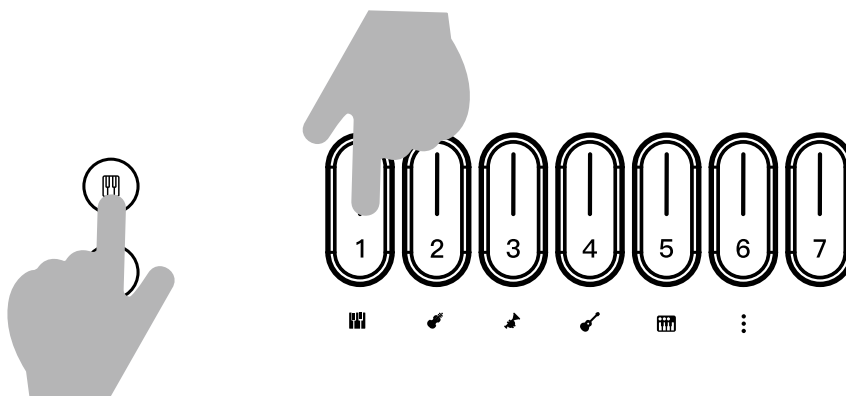

The Chord Touch Bar has two modes: strumming and chord trigger. To switch between these modes, hold down the  button and press the  key. Play a chord by touching the Touch Bar while in chord trigger mode. In the strumming mode, select a chord by touching the Touch Bar and play it using the Strumming Pad.


Changing the Sound (Chord Trigger Mode)




Hold down the  button and press the Touch Bar that correspond to the desired sound icons to change the sound of chord trigger mode.

-  >> Piano
-  >> Strings
-  >> Woodwind & Brass
-  >> Guitars
-  >> Synths
-  >> Others

Save a Chord

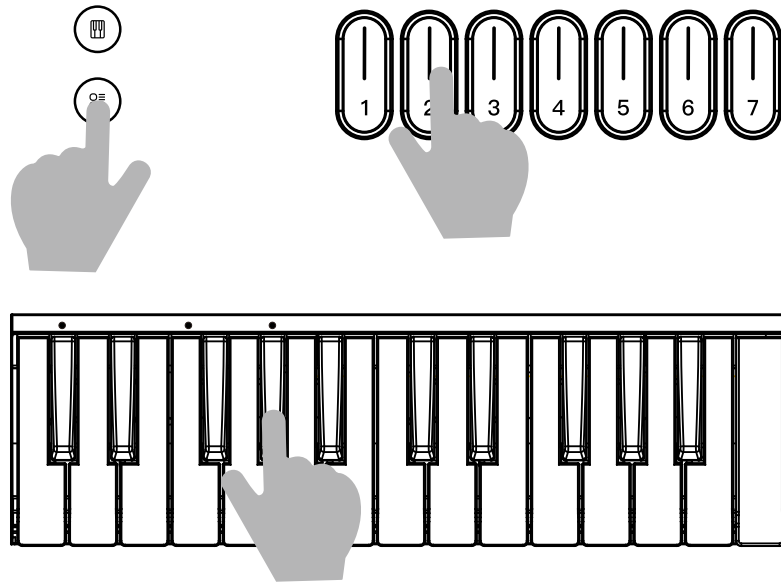


To save a chord to the Touch Bar, just hold down the  button and select a Touch Bar by touching it, the Touch Bar will blink to indicate selection. Play the preferred chord (maximum of 10 notes) on the keyboard.

The played keys will light up in purple. Release the  button to finish and save the chord to the selected Touch Bar.

**This feature is only available in chord trigger mode.*



Strumming Pad

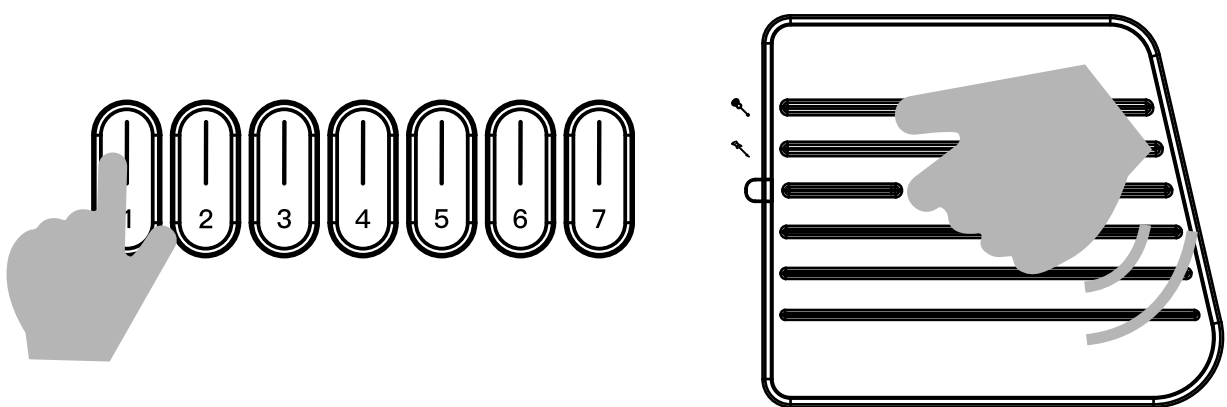


 
 
Combine the Chord Touch Bar to play the Strumming Pad. Choose a chord by touching the Touch Bar with your left hand, and use your right hand to play the Strumming Pad just like a guitar.

The chords from Touch Bar 1 to 7 are: C Major, D Minor, E Minor, F Major, G Major, A Minor, and G 7.


Changing the Sound (Strumming Pad)

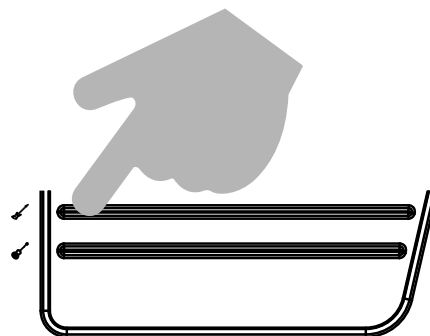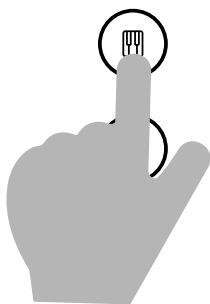

Hold down the  button and press the string that correspond to the desired sound icons to change the sound of Strumming Pad.



Drum Pads

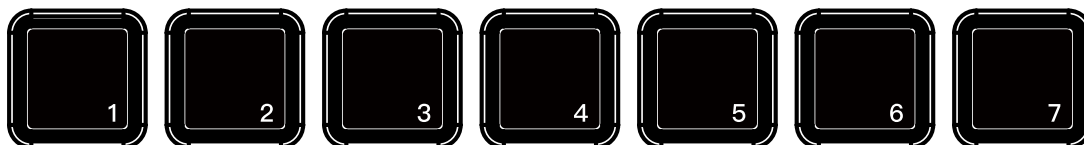


The **BAND** features 7 Drum Pads with velocity sensitivity and RGB backlighting. The sound from Pads 1 to 7 are Bass Drum, Acoustic Snare, Closed Hi-Hat, Open Hi-Hat, Low-Mid Tom, High Tom, and Crash Cymbal.


Connecting Bluetooth MIDI

Let's use "GarageBand" for iOS as an example.


Step 1. Enable Bluetooth in your smartphone's settings.

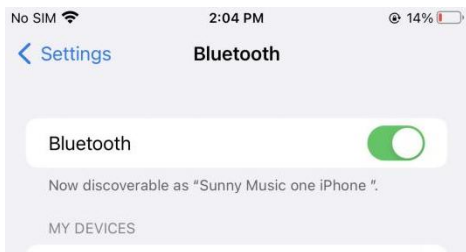


Step 2: Launch GarageBand and choose an instrument. Next, click on the gear icon located in the upper-right corner.

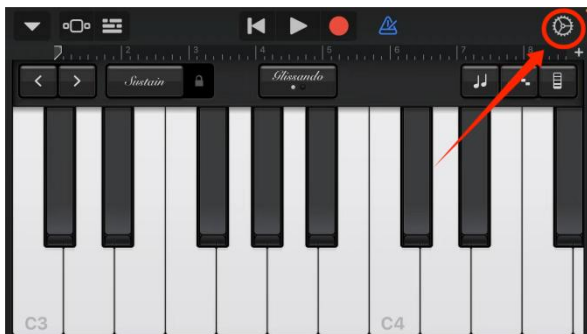


Step 3: Tap on the "Song Settings".

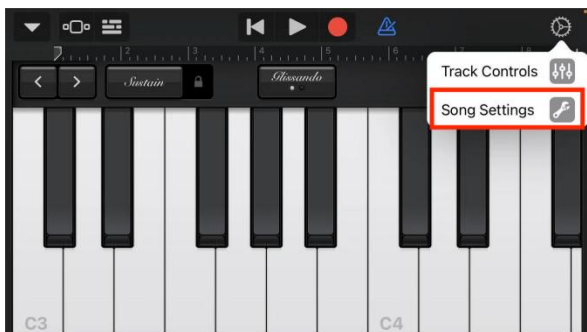

Step 4: Tap on the "Advanced".

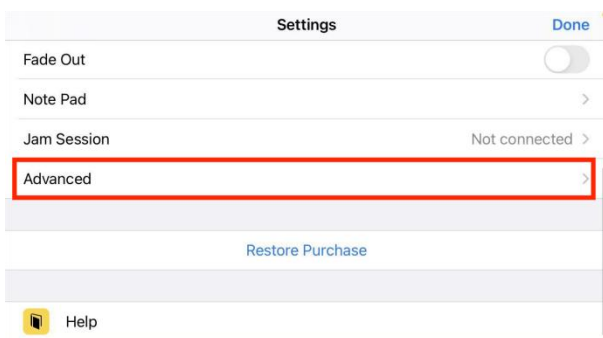

Step 5: Tap on the "Bluetooth MIDI Devices".

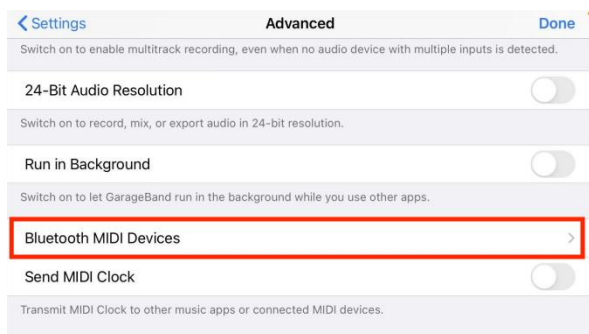

Step 6: Find and select "BAND" in the list of devices. If "Connected" is displayed, the connection has been successful.

