

Wind 2 Digital Wind Instrument User Manual

Introduction

Thank you for choosing the 2nd generation midplus Wind Instrument. Wind 2 has 10 voice including Alto Saxophone, HuLuSi, DiZi, Flute, Clarinet, Trumpet, Trombone, Bassoon, Violin and ErHu. Built-in a high-fidelity speaker and 800 mAh Li-ion battery. Wind 2 also has a low-latency Bluetooth MIDI, you can connect to iOS or macOS through the BLE-MIDI to play with your favorite Apps and DAWs. Before you start playing, please read this document carefully to help you quickly understand the function of the Wind 2 and the basic operation.

 
Main Features

- Smooth and stylish appearance design
- Removable silicone mouthpiece
- 10 voices
- Build-in speaker
- 2 fingering charts
- 3 level of breath sensitivity
- Transpose up to 12 semi-tones
- Bluetooth MIDI
- Headphone output
- 800 mAh Li-ion battery

Voice List

1. Alto Sax
2. Hulusi
3. DiZi
4. Flute
5. Clarinet
6. Trumpet
7. Trombone
8. Bassoon
9. Violin
10. ErHu

Panel Descriptions

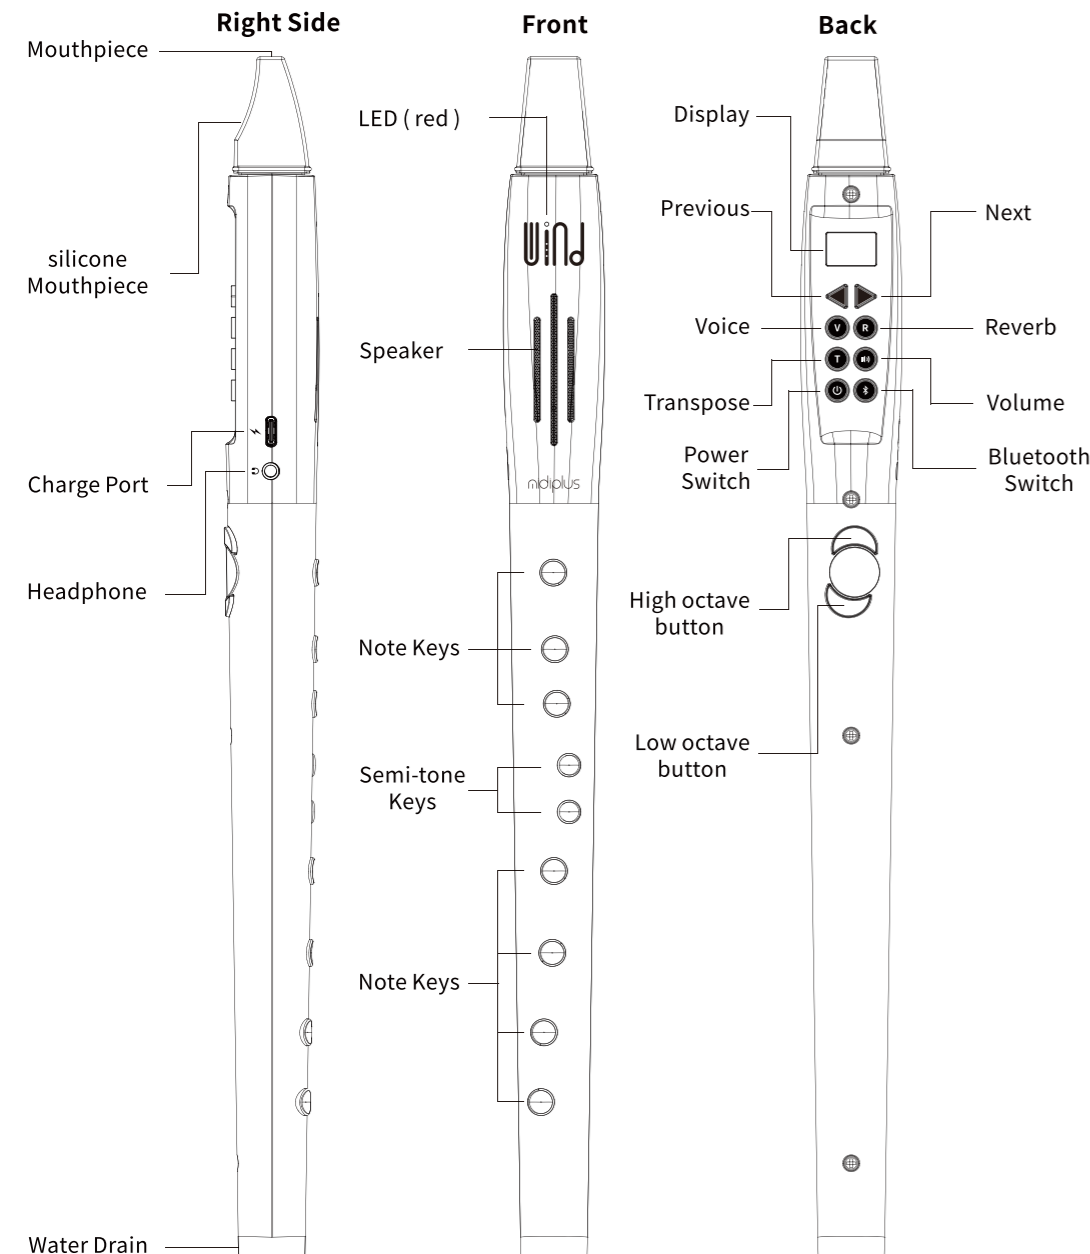


Quick Start

Step 1: Please place the included removable silicone mouthpiece over the Wind 2 mouthpiece.



Step 3: If you want to connect headphones or an external speaker, please connect them to the Headphone output, then the build-in speaker will be muted.

 
(Note: Always turn off the power of speaker before connecting.)

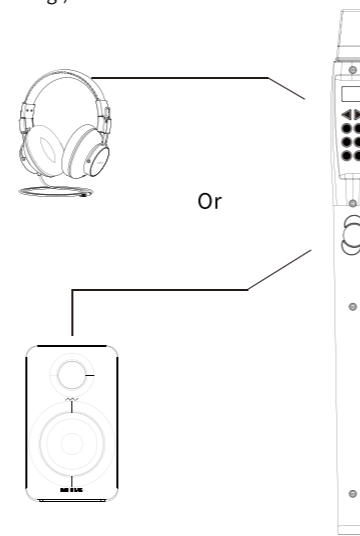

Step 2: Hold the Power button to turn on the power.




 (Press the Power button to display the battery life)

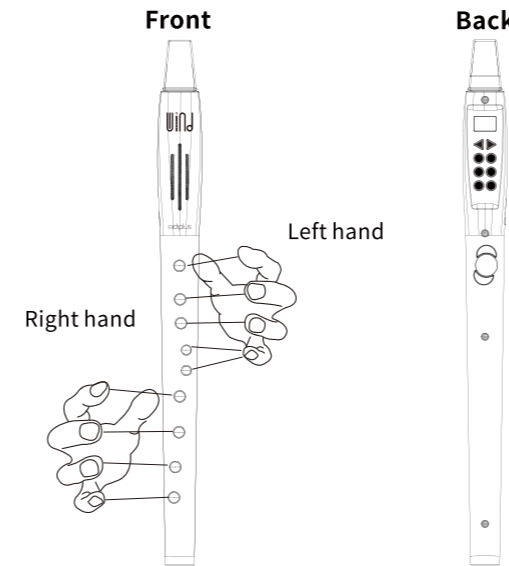


Settings

 Voice Selection

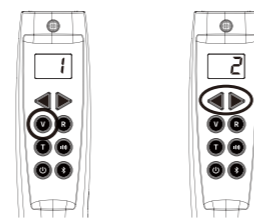

Press the "V" button, then use the Previous/Next buttons to select the voice between 1 to 10, the default is 1.

 
Transpose Setting

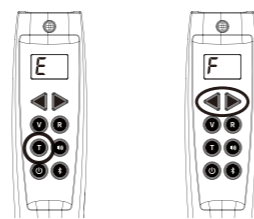

Press the "T" button, then use the Previous/Next buttons to transpose, the default is "C". The screen display and Key as below:


Display	C	db	d	Eb	E	F	Gb	G	Ab	A	bb	b
Key	C	C#/D ^b	D	D#/E ^b	E	F	F#/G ^b	G	G#/A ^b	A	A#/B ^b	B

 Reverb setting

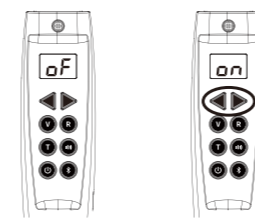


Press the "R" button, then use the Previous/Next buttons or long press the "R" button to turn on/off the Reverb, "off" means turn off Reverb, "on" means turn on Reverb, the default is turn on.

 Volume Control

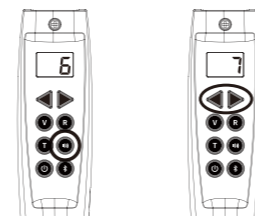

Press the "M" button then use the Previous/Next buttons to turn the volume from 0 to 10 levels, 0 is muted, 10 is the maximum, the default is 10.

 Bluetooth MIDI

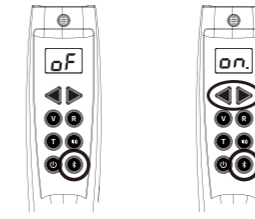

Press the "Bluetooth" button, then use the Previous/Next buttons or long press the "Bluetooth" button to turn on/off the Bluetooth, the dot on lower right corner of the screen blinks slowly when Bluetooth is available, and lights up when Bluetooth is connected

 
(Note: The Bluetooth MIDI device is not able to connect to Bluetooth headphone and Bluetooth speaker.)

Power Indicator Status


LED lights up: Power on or the battery is full.
LED blink slowly: Charging.
LED blink rapidly: Low battery, and will turn off after 5 minutes.

Connect to GarageBand via Bluetooth MIDI

Step 1: After select an instrument, tap on the gear icon in the upper right corner.

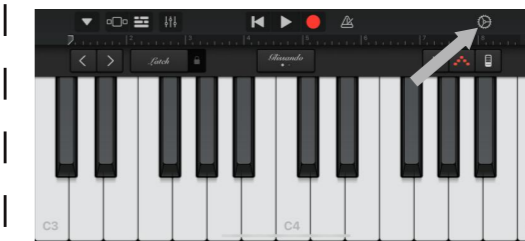

 
Step 3: Tap on the "Advanced".

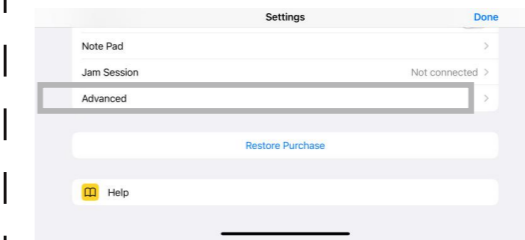

Step 5: Find "Wind" in the list and tap on to connect.



 Restore to Factory Settings

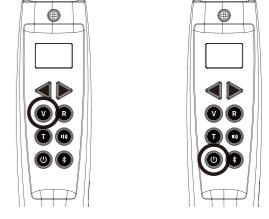


Turn off the power, press and hold the "V" button, and then long press the Power switch to turn on the power, when the display flashing "r5", Wind 2 has been restored to factory Settings


Battery Life Display

Display	Lo	20-95	FU	Flashing in cycle
Battery life	Low battery	20%-95%	95% above	Charging

 Step 2: Tap on the "Song Settings".

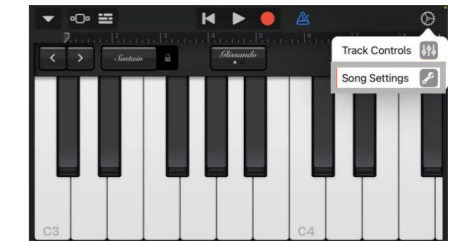

 Step 4: Tap on the "Bluetooth MIDI Devices".

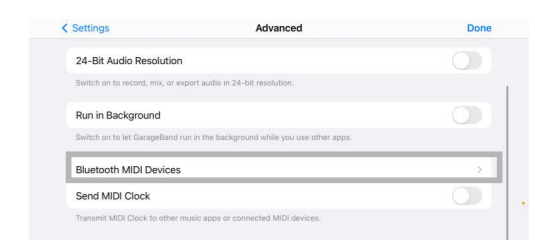

Cautions

- This product built-in rechargeable lithium battery, which can provide up to 3 hours of normal performance when it is fully charged.
- When the battery power is low, the power LED will blink rapidly, and will turn off after 5 minutes.
- Continual use of the product while the battery power is low may impair its performance and can decrease the life- span of the battery. Please connect and charge the Wind 2 with a suitable power supply immediately.
- When charging with a power adapter, you should choose to use a power adapter that is CCC certified and meets the requirements of the standard.
- While the Wind 2 is charging, the power LED will blink slowly, and will changes to steadily lit once the Wind is fully charged.
- To save power, the Wind 2 will automatically turn off after 30 minutes of no operation.
- Unplug the charging cable when the Wind will not be used for a long period of time or during a thunderstorm.
- Do not disassemble, impact, squeeze or throw the battery. If there is serious expansion, please do not continue to use it.
- Do not place the equipment into high temperature, also if the battery water ingress, do not continue to use it.
- Please avoid using this product for children under three years old.

Fingering

Note keys (Front Panel): ● Hold ○ Release

Saxophone

1 #1/b2 2 #2/b3 3 4 #4/b5

5 #5/b6 6 #6/b7 7 $\dot{1}$ $\dot{1}/\flat\dot{2}$

The alternative fingerings of some higher octave notes:

$\dot{1}$ $\#1/\flat\dot{2}$ $\dot{2}$ $\#2/\flat\dot{3}$ $\dot{3}$ $\dot{4}$ $\#4/\flat\dot{5}$ $\dot{5}$

DiZi

When in the key of G, fingering as below:

$\dot{3}$ $\dot{5}$ $\dot{6}$ $\dot{7}$ $\dot{1}$ $\dot{2}$ $\dot{3}$ $\dot{4}$

The alternative fingerings of some higher octave notes:

3 5 6 7 $\dot{1}$